




ARGON18 ADAPTER

INSTALLATION GUIDE

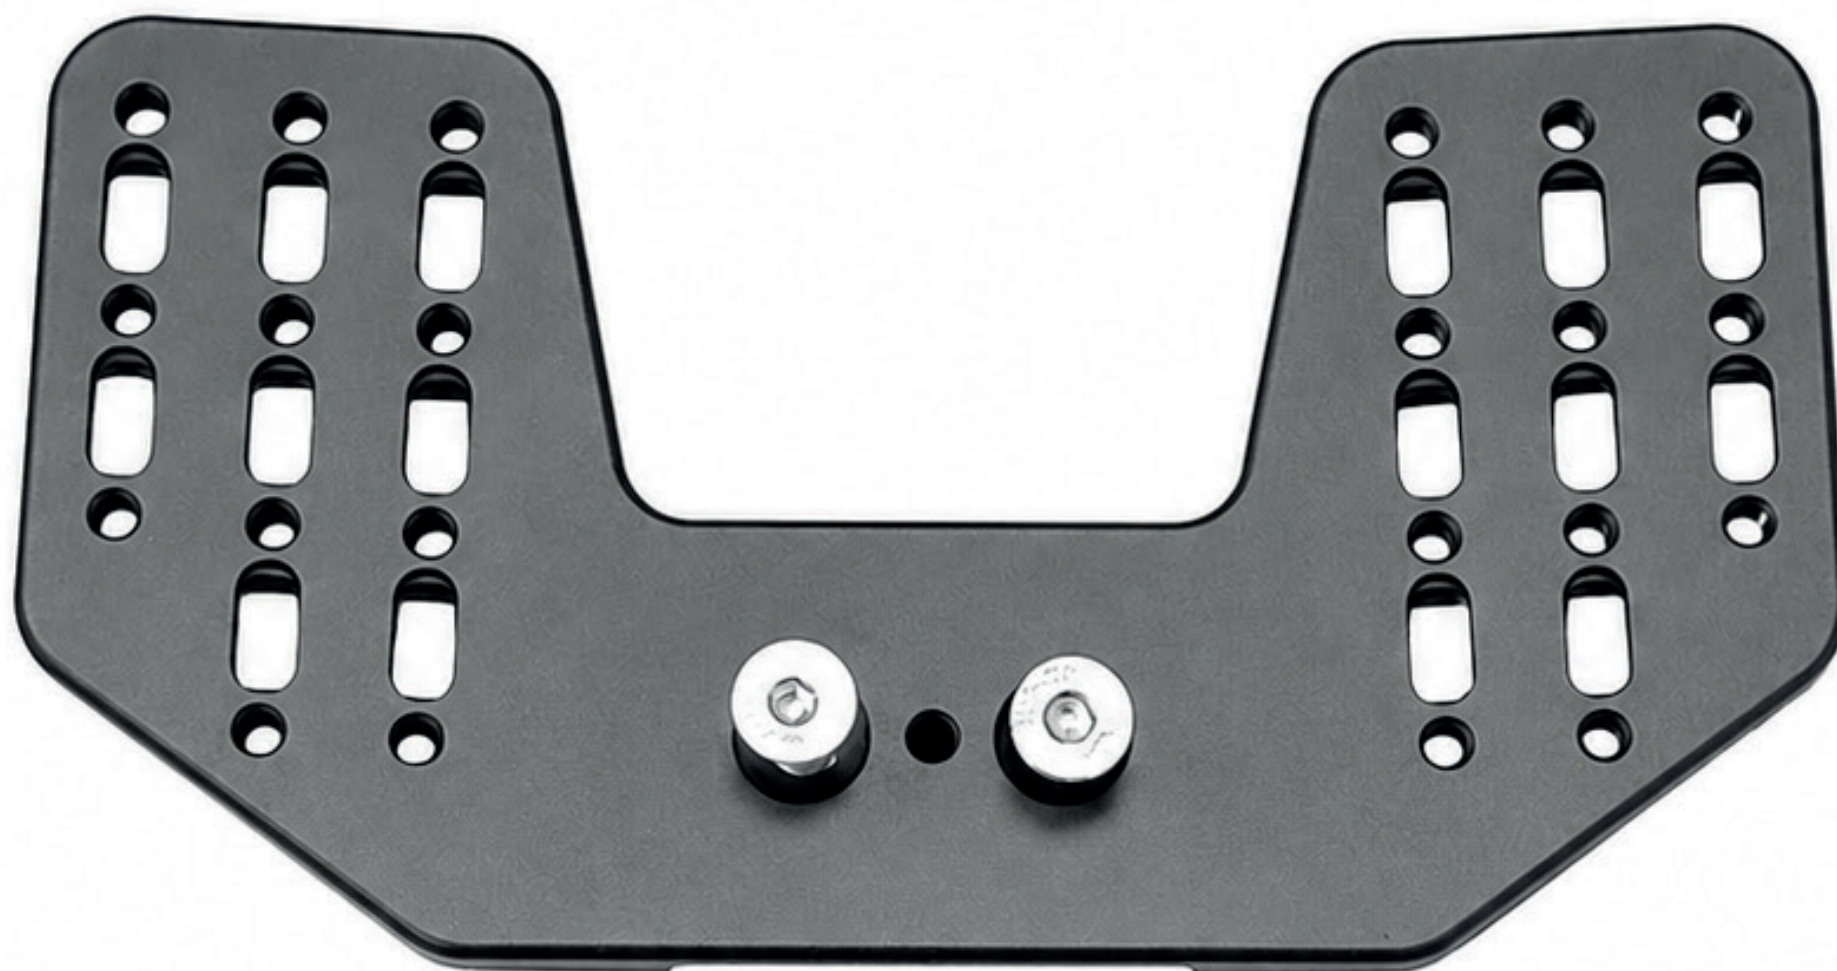


U-PLATE

Assemble the Delta speed adapter on top of the risers (If necessary) or directly on top of the 81531 plate (6Nm).

Assemble the Delta speed U plate on top of the adapter with the two screws (6Nm), there are 2 holes on the side in case of shimano di 2 cables.



RISERS NOT INCLUDED

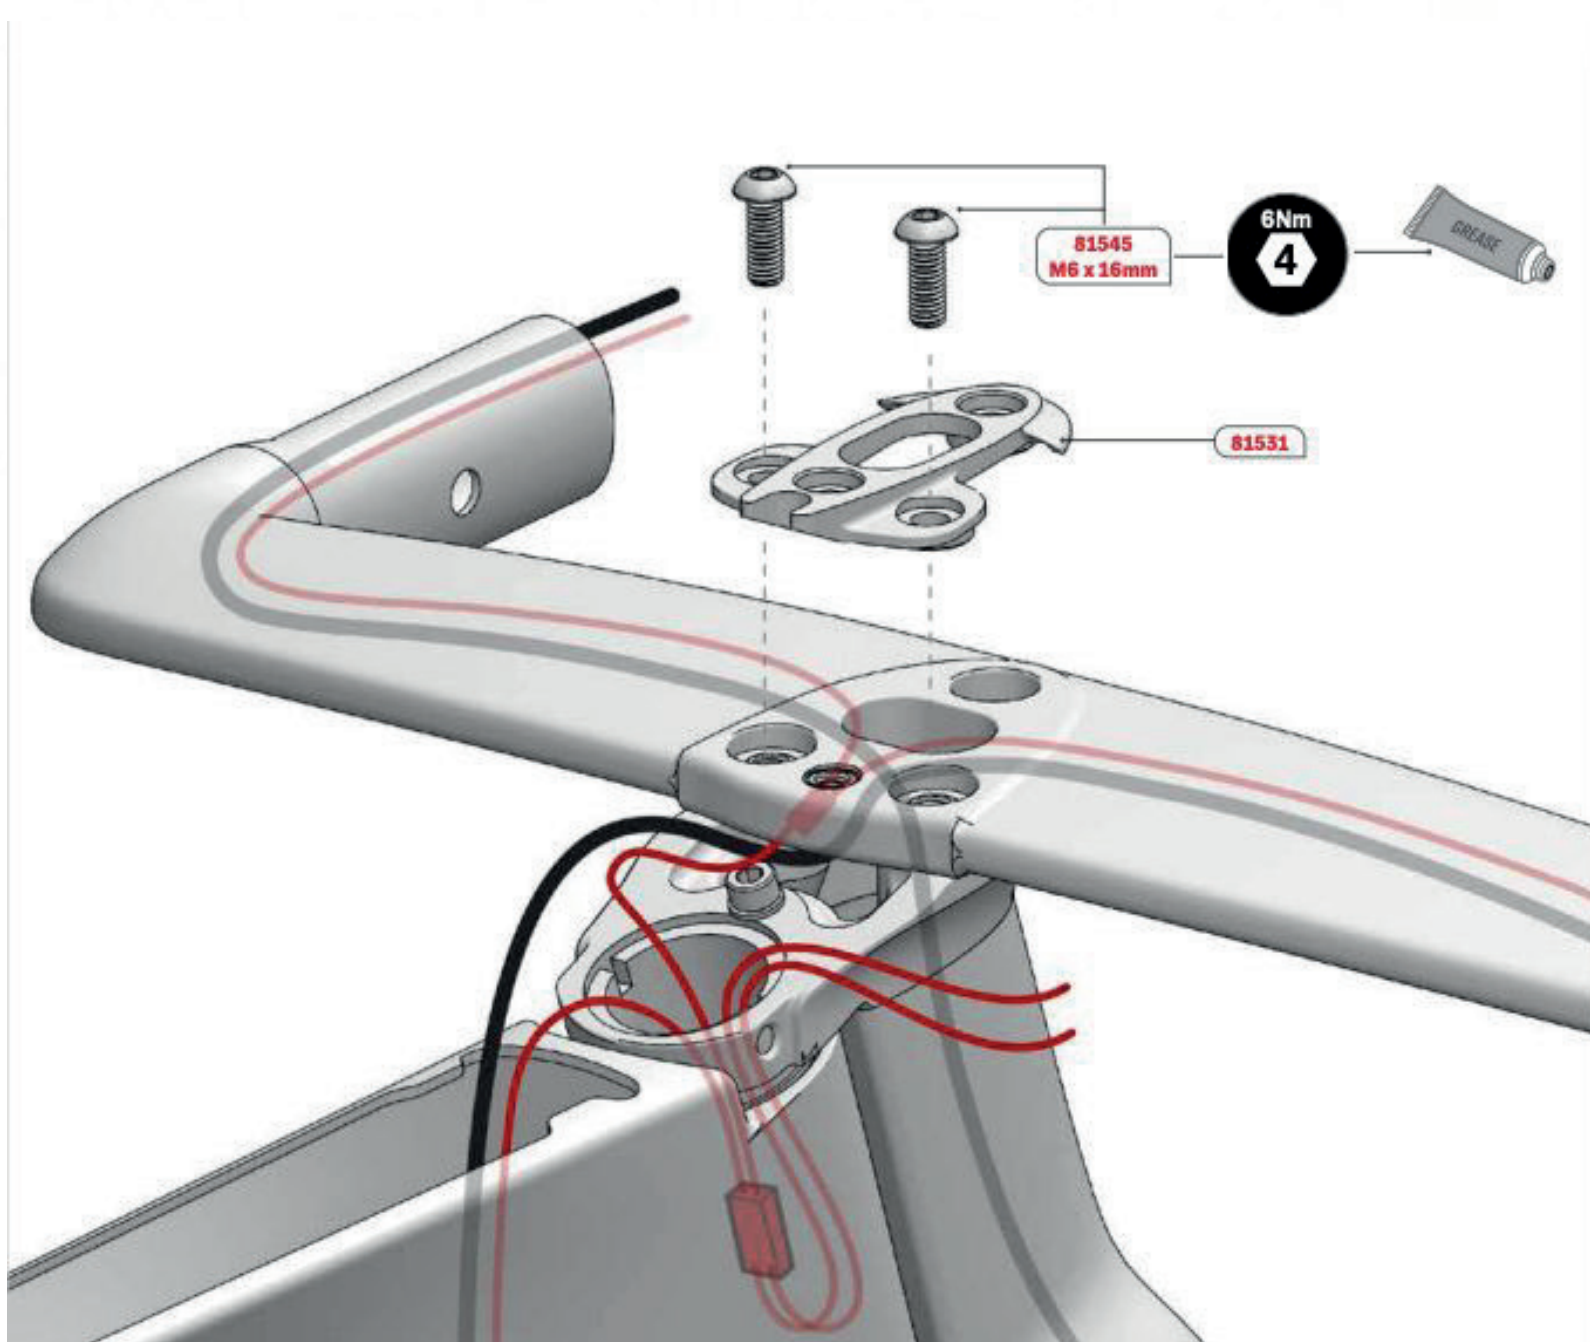



AEROBAR + U PLATE

INSTALLATION GUIDE

M5 X 14mm
TORQUE 5Nm



Use the Thread lock
on the screw's thread





AEROBAR HANDLE GRIP

+ GPS COMPUTER

INSTALLATION GUIDE

